



●所购商品与使用说明书上的插图可能会有不符之处。



SM-SP (C/E) / D

务请读守 ● 使用时为避免烫伤或饮料的变质、变色、商品故障或污垢,请注意下述事项。

请勿让婴幼儿使用。请勿放在婴幼儿摸得到的 地方 会造成烫伤、受伤等危险。 务必在安装了垫圈类的状态下使用 以免外漏或烫伤,或造成脏污。	请勿将滚烫的茶壶接触到口 以免倾倒造成烫伤的危险, 或因而破损、变形。			
不要安装除产品专用部件以外的部件 以免造成外漏或故障。	□			
请勿使用保温性能不良的产品 使用此类产品加入热饮时,本体外侧可能过热, 会有烫伤的危险。	以免溢出造成烫伤。 请勿靠近电暖炉或瓦斯炉等火源附近 以免造成变形、变色。			
真空层内进水时请勿使用 由于保温性能降低, 会有烫伤的危险。	请勿在倾斜状态或靠近脸部时打开上盖 以免热饮突然流出或飞溅导致烫伤。			
另外,若其中的水分漏出, 饮用后可能会导致身体不适。	开车时请勿饮用 以免烫伤, 或造成车内及衣物弄脏。			
真空层	使用车内水杯架时请遵守以下注意事项 ①使用后请确实盖紧上盖 ②请确认本产品可以固定安放至水杯架后再			
请确实盖紧杯盖组。另外, 使用后请盖紧上盖 以免外漏或烫伤, 或造成脏污。	使用 ③请确认水杯架支撑强度后再使用 ④使用市售的水杯架时,请选用固定式			
加入饮料的量请到图的位置为止 加入过量,盖上杯盖组时会造成溢出, 如是热饮会有烫伤的危险。 此外,盖紧后也会有漏出的可能。	④使用印音的亦怀来的,请远用固定式 如本产品发生翻倒或倾斜、水杯架破损雪 倾倒等情况,有可能造成烫伤、受伤及雪 故。此外还可能弄脏车内与衣服。●根据部分车种及市售水杯架的种类不同			
饮料的位置	有时会无法放入。			
低于A部 1cm以下 约1cm↓	一旦掉落会有危险。 请勿分解和修理			
本体内侧→, 饮料	以免造成故障或损坏等事故。 请勿使用微波炉来加热 会有引起火花的危险。并会造成变形、变色。			
加入热水时 ●喝饮料时,勿将本体急剧倾斜,请慢慢地喝 一旦溢出会有烫伤等危险。 ●请勿摇晃本体 会有烫伤、受伤等危险。 ●在喝的时候有可能烫伤,请注意安全 因隔热效应,即使加入热饮,本体外侧也会变热。 ●本体内的压力增加,杯盖组会难以取下。此时请先打开上盖后,再取下杯盖组。 如果强行取下杯盖组,有可能使杯盖组飞散,导致受伤或烫伤。				
-2-				

请勿放在火源(煤气台等)或电炉、H/炊具、H/灶台上 以免造成火灾或故障。

请勿放入下述的饮料

- ●干冰、碳酸饮料
- 产品内压力增加,造成饮料喷出或杯盖组破损飞散等,会有危险。
- ●味噌汤、热汤或昆布茶等含有较多盐分的流质
- 本体内侧为不锈钢材质、避免造成生锈而降低保温、保冷功能。 ●牛奶、奶类饮料、果汁等

因成分容易变质,长时间放置不饮用,会因腐坏产生气体,导致产品内压力增加, 造成内容物喷出或杯盖组破损飞散等危险。

●果肉、茶叶

会造成堵塞,外漏等。

饮料请干当天饮用完

以免造成腐坏。另外,长时间放置不饮用,可能因内容物腐坏产生气体,使产品内部 压力增加、导致转开时杯盖组飞散、饮料喷出或杯盖组破损飞散等危险。

本商品为饮品的保温保冷之用,请勿用于其它用途


注意事项 请确认饮料不会外漏后使用 湿度较高状态下加入冷饮,杯盖组上有时 有水滴。放入包等里面时请直立放置。 请勿摔、碰等强力撞击 会造成树脂部分破损,本体表面凹陷而破坏或 本产品是以直接饮用为目的设计的。 隆低保温,保冷性能。 倒出饮料时可能会造成飞溅。 使用后请立即充分清洗本体内侧 放入皮包内时,请有立放置, 否则会造成生锈、穿孔等导致故障, 以免外漏。 或引起腐坏。 请绝对不要撕下本体外侧底部的贴纸 XO 否则会造成生锈. 穿孔等导致故障。 请勿用指甲及坚硬物品刮搓本体的图案部分 贴紙 会造成图案脱落。 长时间保温热茶时,茶水会变色。 外出时建议 放入运动饮料时,即使是外出时等不便清洗的 使用茶包。 情况下,也请使用后立即充分清洗本体内侧, 本体、本体外侧 (杯口) 和杯盖组。 当摇晃本体时,会听到"沙沙"声。这是嵌在 使用后如放置不洗,会造成生锈、穿孔等故障。 本体内胆中用来提升保温、保冷效果的金属箔 请勿强压放入过大的冰块,请将冰块敲成 所发出的声响,属于正常现象。 比杯口小的块状 ①不得存放碳酸饮料 以免变形或故障。 ②不得用于对乳制品或婴儿食品的长时间保温 (有细菌繁殖的危险) 使用后请务必将中栓及垫圈类充分洗净 ③不得使用微波炉等加热设备对产品进行加热 否则会造成腐烂、发霉、串味或变色。 另外会造成饮料外漏。 ④不得使用洗碗机清洗

使用方法

●使用前请按清理方法将杯盖组、本体内侧、本体外侧充分洗净。 ●刚开始使用时,可能会有塑料等异味,随着使用次数的增加会逐渐消失。



使用方法继续

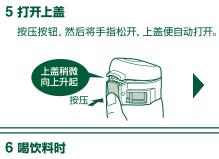

● 喝饮料时, 勿将产品急剧倾斜, 请慢慢的喝。 (以免溢出或烫伤,也避免弄脏衣服。

7 盖上上盖并锁定

① 在产品直立放置的状态下. 请确实盖紧上盖. 直到听到卡嚓声为止。 ② 将安全锁确实移动到左端, 然后锁住。 (请参阅 P.4 4 的图)

 
直到听到 卡嚓声为止 确实盖紧上盖 ● 喝完饮料后,请将产品直立放置,并盖紧上盖。 **4**2

杯盖组的拆卸方法

●请勿将上盖打开放置。

1 拆卸中栓

在打开上盖的状态下,如图 所示手持杯盖组,按杯口套 后侧(▽记号所指的部分). 取下中栓。



杯盖组的拆卸方法 继续



杯盖组的安装方法 继续



使用过程中由于水质、异物等,可能导致本体内侧出现红色锈斑或水垢。此种状况出 现时,请在热水中加入约10%的醋,并将其倒入本体内,不要安装杯盖组,放置30分钟 ~1小时,之后再将本体内侧充分洗净。

-6-

用手指从中栓垫圈的外侧向

中心均匀按压。

 \leq

请注意上下方向不要弄反。

(可能会造成饮料外漏。

四部-

清理继续

茶垢等的清理方法


│建议使用 "象印不锈钢保温瓶清洗剂SB-ZA01E " 清洗不锈钢保温杯本体内侧、杯盖 | 组水垢或茶垢。(另售)清洗本体时请卸下杯盖组。具体事宜请咨询当地经销店。 ●請注意清洗本體時不可蓋上瓶蓋組。

● 杯盖组属于消耗品。建议一年更换一次为宜。

●本品采用了安全可靠且符合食品卫生安全要求的材料,但是,为了保证最佳性能, 有部件受损时请及时更换。更换部件时,请预先记录型号和部件名称,然后联系 您购买的经销商或象印客服中心。(需自费)

品质标示

品名:不锈钢真空保温杯						
型号	容量	重量	保温效力(℃)		保冷效力(℃)	
¥5	(L)	(kg)	1小时	6小时	6小时	
SM-SP24 SM-SP24E	0.24	0.15	≥85	≥61	≪9	
SM-SP24E O.124 O.10 O.00 O.01 O.01						

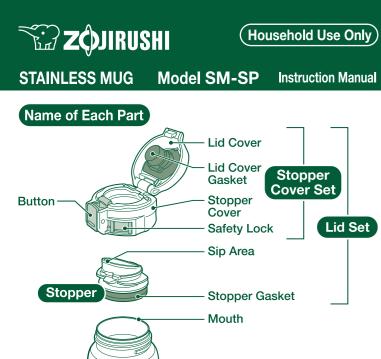



•The illustrations used in this instruction manual may differ from the actual product you have purchased.

Please read these instructions before use, and keep for future reference.

• Please follow these instructions to prevent scalding, deterioration and discoloration of beverages, as well as malfunction and staining of the Mug.

Do not allow infants or small children to use this product. Keep out of the reach of infants and small children.

Mishandling may cause injury or scalding.

Always make sure that the Gaskets are attached during use. Contents may leak and cause scalding or stains.

Do not attach parts other than those specifically designed for this product. Doing so may cause leaks or breakage.

Do not use if the Mug loses its heat retention properties. The outside of the Mug may become very hot if hot beverages are poured inside.

Do not use if water enters the interior of the Vacuum Layer. In this case, the heat-retaining performance may deteriorate, resulting in a risk of burns. In addition, if the internal water seeps out, drinking it may cause illness.



Be sure to set the Lid Set and close the Lid Cover securely after use. Contents may leak and cause scalding or stains.

Leave 1cm (1/2-inch) room on top when filling the Main Body. Contents may overflow when placing the Lid Set.



When containing hot beverages:

- Drink slowly without tilting the Mug suddenly.
- There is a possibility that the beverage may spill and cause burns. • Do not shake the Mug.
- Doing so may cause scalds or injury.
- Be careful not to scald yourself when drinking out of the Mug. Due to its vacuum insulation, the outside of the Mug will not become hot, while the beverages inside will remain very hot for many hours. Please drink with caution.
- The pressure inside the Mug may rise, making it difficult to remove the Lid Set. If that happens, open the Lid Cover once, and remove the Lid Set.

Forcibly removing the Lid Set may make it fly off abruptly, causing injuries or burns.

Do not allow hot kettles to touch the Mouth of the Main Body. The Main Body may tip over, causing scalds.



Do not fill with beverages while the Lid Set is attached. Doing so may cause beverages to overfill and may cause burning and scalding.

Do not place near heat sources such as gas stoves, ovens and heaters. Doing so may cause deformation or discoloration of the Mug.

Do not open the Lid Cover with the Mug close to your face or tilted toward you. Hot beverages may suddenly come out or spew out and may cause scalding.

Do not drink out of the Mug while driving. Doing so may cause scalds or stain the interior of the car or clothes.

When using a vehicle drink holder:

①Always keep the Lid Cover securely closed when not drinking. ②Make sure that the product can remain stable inside the drink holder before using it.

3 Check the strength of the drink holder before use.

- Do not use a hanging-type drink holder that attaches to the window or air vent. If the product falls or tips over, or the drink holder falls off or becomes damaged, this may cause scalding, injuries, or accidents. In addition, the interior of the car or your clothes may become stained.
- The Mug may not fit into some drink holders.

Do not hold the Mug by the Lid Set or the Lid Cover when carrying. The Mug may fall and cause injuries.

Do not disassemble the Main Body. Doing so may cause injury or damage the Mug.

Do not heat in a microwave.

Doing so may cause sparks, deformation or discoloration of the Mug.

Do not place near open flames (from gas stoves, etc.), on top of electric heaters or IH hot plates, or other IH cooking devices. Doing so may cause a fire or malfunction.

Do not fill the Mug with the following:

- Dry ice and carbonated drinks: Contents may spill out or the pressure may cause the Lid Set to burst, causing injuries.
- Liquids high in sodium such as soup and Kobu-cha: Although the liner is made of 18/8 stainless steel and is nonstick coated, salt may cause rust resulting in loss of thermal insulation.
- Dairy products and fruit juice: If left inside for a long period of time, contents may spoil
 and produce gas that may cause the Lid Set to burst, causing injuries.

• Fruit pulp and tea leaves: May become caught on the Stopper Gasket and cause contents to spoil.

Consume beverages within the same day.

Not doing so may cause spoiling. In addition, if left inside for a long period of time, spoiled beverages may produce gas, raising the pressure inside the Mug and causing the Lid Set to burst or beverages to spill, resulting in injuries and scalding.

This Mug is for storing and keeping beverages hot or cold. Please do not use for other than intended purposes.

-2-

Warnings & Cautions

Make sure that there is no beverage leakage before using the Mug.

Avoid dropping or hitting against hard surfaces.

Damage to the plastic or stainless steel surface of the Mug may reduce its ability to retain heat.

Clean the Main Body after every use.

Not cleaning thoroughly may cause the Main Body to rust, beverages to spoil, or cause pinholes.

Do not remove the sticker on the bottom of the Main Body. Doing so may cause rust or holes.

When you fill the Mug with sports drinks, even in situations where you are unable to clean the Mug properly, such as during an outing, always thoroughly rinse the inside and outside (Mouth) of the Main Body and the Lid Set immediately after consumption.

Leaving the Mug as is after consumption may cause rust, holes or other problems.

Do not force large ice cubes in. Break them into smaller pieces instead. Doing so may cause deformation or damage to the product.

Always clean the Stopper and Gaskets thoroughly after use. Not doing so may cause decay, mold, odor or discoloration. It may also cause leaks.

If a cold beverage is put into the product under highly humid conditions, condensation may form on the Lid Set. Stand the product upright when placing it in bags.

This product is designed to be drunk from directly. If it is used for pouring, the beverage may splash.

Store the Mug upright when carrying inside bags to prevent beverages from spilling.

Do not scratch or rub the design on the outside of the Main Body strongly using fingernails or hard objects.

This may cause the design to come off.

Hot tea may discolor if stored for a long period of time. We recommend the use of tea bags and brewing right before consumption.


The rattling noise that may be heard when the Main Body is shaken comes from the metallic foil used in the vacuum insulation to increase heat (cold) retention, and does not indicate a malfunction.







How to Use:

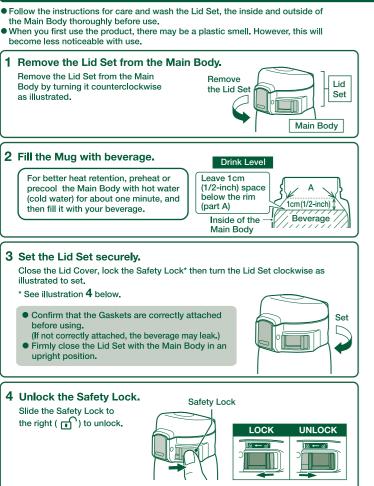



How to Disassemble the Lid Set: continued

3 Remove the Lid Cover Gasket.

Pinch the edge of the Lid Cover Gasket as illustrated and pull it toward you to remove.



How to Assemble the Lid Set:


• Be sure to attach the Stopper Cover Set, Lid Cover Gasket, Stopper and Stopper Gasket correctly to prevent malfunction or leaking of beverages.

Attach the Lid Cover Gasket.

Align the Small Opening on the Lid Cover Gasket with the protrusion on the Lid Cover and press to attach. Be sure to set the Lid Cover Gasket

Small Openina Protrusion-Lid Cover Gasket Lid Cover

2 Attach the Stopper Gasket.

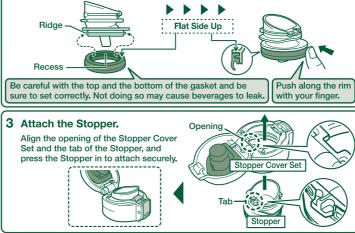

before use.

Line up the recess in the Stopper Gasket with the ridge on the Stopper, and, applying pressure from the outside in, push it into place.



How to Take Care of Your Mug:

- Clean the product after each use to prevent odors and mold, and to keep the product sanitary.
- Always disassemble the product before cleaning. (see p.6-7)

Main Body	 Wash with warm water and mild dishwashing liquid using a soft sponge. Rinse and then dry so there is no water left inside. To avoid damaging the nonstick coating, wash the liner of the Main Body using a soft sponge with a handle or a similar implement.
Lid Set	 Wash with warm water and mild dishwashing liquid using a soft sponge. Rinse and then shake a few times to ensure there is no water left inside. Wipe thoroughly dry. When washing the Lid Set, disassemble it first then wash and dry. Use a small brush sold in stores if necessary.

•Streaks or smudges caused by rubbing on the coated portion of the Main Body can be removed using a soft eraser.

When Cleaning Your Product:

- Do not use a dishwasher or dish-drver. Do not boil to sanitize.
- Do not clean using paint thinner, polishing powders, abrasive cleansers, scrub brushes (nylon, metal wire, etc.), melamine sponges, the nylon side of an abrasive sponge, or any similar items. High temperatures and humidity may damage the product.
- Do not use chlorine-based bleach. In addition, do not use any kind of bleach, even non-chlorine-based, to clean the outside of the Main Body. It may damage the paint, print, or stickers on the Main Body.
- Do not soak in water for an extended period of time.
- If the product is not going to be used for an extended period, wash thoroughly with cold or lukewarm water and dry well. Store the product away from high temperatures and humidity. High temperatures and humidity may damage the product.

To Remove Rust Spots and Water Stains:

You may find rust spots or water stains caused by impurities in the water. To remove these stains, fill the Main Body with hot water with 10% vinegar and let it stand for 30 minutes to an hour without attaching the Lid Set, then wash the interior thoroughly.

To Remove Coffee and Tea Stains:

To remove coffee and tea stains from the interior and the Lid Set, we recommend using Zojirushi's cleaning detergent SB-ZA01E. Always remove the Lid Set when using SB-ZA01E. Contact Zojirushi Customer Service or your local dealer for further information.

Replacing the Stopper and Gaskets:

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or its surface becomes rough, please replace them for optimum performance. The Stopper and other consumable parts may need to be replaced due to time and wear. Please check them about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.